

INDEFLATE DIGITAL EDITION INSTRUCTIONS

HOW DOES IT WORK;

STEP 1

Uncoil each hose and make sure that the dump valve (the sliding button in the centre of the INDEFLATE) is in the bottom position.

STEP 2

Attach the quick chucks firmly to your tyre valve stems(1 left tyre and one right tyre).

STEP 3

To deflate, slide the dump valve on your INDEFLATE to the open position. Air will flow from the dump valve, monitor the tyre pressure on the gauge to the desired pressure and move the slide valve to the closed position.

To inflate your tyres, attach your air supply (compressor , ie.) to the valve stem on the bottom of your INDEFLATE and inflate to the desired pressure.

STEP 4

Detach the quick chucks from your tyre valve stems.

STEP 5

After use, open the INDEFLATE dump valve to release pressure, then store in the closed position to prevent dust and debris from entering the valve.

NOTE

To equalise the pressure between 2 tyres, connect the quick chucks to 2 tyres, leave the dump valve in the closed position and leave the INDEFLATE connected for a few seconds to 2 minutes depending on difference in pressure.

GAUGE OPERATION

The gauge has 2 buttons for operation;

-Left button(On/Unit/Off)

-Right button(Light/Zero)

*To switch on the gauge press the left button.

*To switch between pressure units, press the left button once on until The gauge reading is on the desired unit of pressure.

*To switch on the light on the display, press the right button when the display is on.

*The gauge will automatically switch off after 20 seconds.

INSERTING THE BATTERIES

- 1) Place the Indeflate in an upright position with the gauge facing you.



- 2) Hold the Indeflate with 2 hands firmly, and press the top of the rubber gauge cover back with your thumbs.



- 3) Open the plastic cover at the back and insert your batteries (2 x AAA batteries).

