



EZUp Instruction kit **HILUX EZUp Hoodlift** **HL0050**

1 OPEN HOOD OF VEHICLE USING ROD TO KEEP HOOD OPEN WHILST YOU WORK

Left and Right hand side of the vehicle is stamped inside Bonnet/Hood

2

Notice the chamfer on the Bottom Stud.
Also notice the groove on the washer.

3

Insert the nut in the existing hole, flat side first and chamfer at the top.
Hold washer flush against the body and pull nut into groove and then screw to fasten.
Repeat for RHS.

4 LHS HOOD

On the hood remove the LHS top bolt and leave the bottom bolt in place. **DO NOT** discard the existing LHS Top bolt.

5

Bracket slides over existing bottom bolt

Place LHS bonnet bracket onto bonnet and use existing LHS Top bolt to secure bracket against bonnet.

LEFT HAND SIDE BONNET

6

Fit the LHS top bracket, and replace the LHS bolt. Ensure that the ball is facing out of the vehicle.
Fit the Lift-O-Mat to the hood/ bonnet first with the piston rod facing down.

7

Click top Ball Socket onto Ball Stud on Bracket

Attach Ball Socket at piston end side to the Ball Stud in bonnet/hoodlift Fender

LEFT HAND SIDE BONNET AND FENDER

8

Repeat steps 4 - 7 for RHS

FITTING KIT CODE	MANUFACTURER	MODEL TYPE	YEAR	PRODUCT	REVISION	LABOUR TIME	DATE	PAGE
HL0050	TOYOTA	HILUX	2016 2ND INTRO	EZUp	4	30min	02/09/2019	1
TORQUE-N.m	★ 25N.m ± 2N.m							

NB: After installation open Hood/Bonnet gently to ensure that there is no interference with any hardware.

IMPORTANT: No liability will be incurred by Industrial Specialised Applications company, for injury, death, or property damage caused by a product which has been set up, operated, and/or installed contrary to EZUp installation guide/ manual, or which has been subjected to misuse, negligence, or accident, or which has been repaired or altered by anyone other than Industrial Specialised Applications, or which has been used in a manner or for a purpose for which the product was not designed.